imat

TOLO

USER'S MANUAL

THANK YOU

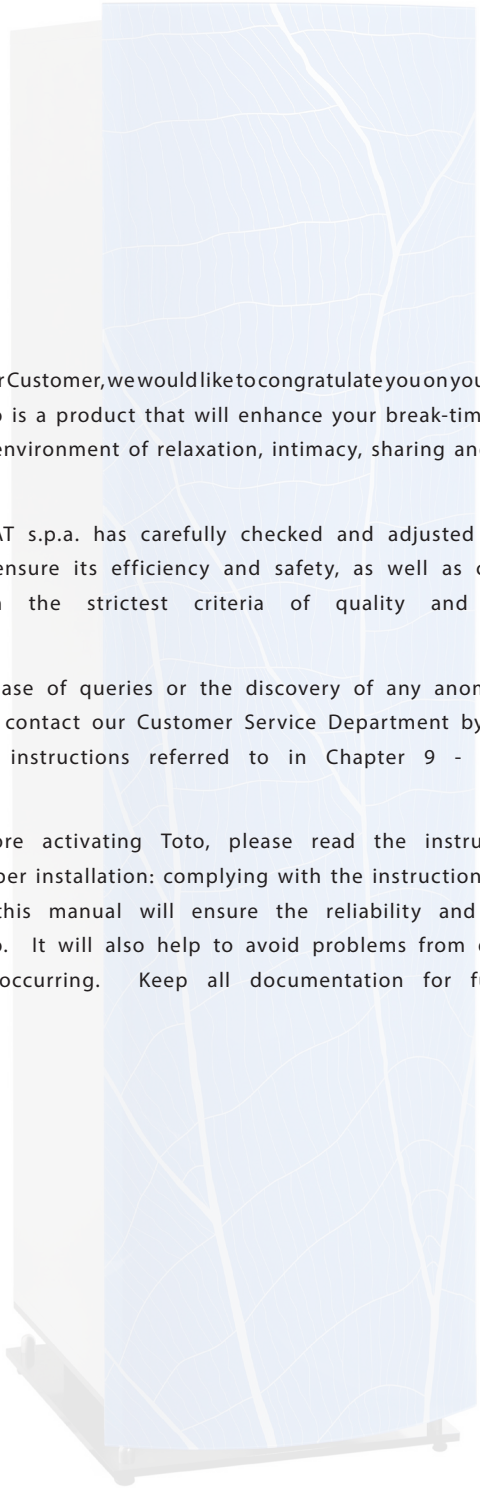

Dear Customer, we would like to congratulate you on your purchase. Toto is a product that will enhance your break-time, creating an environment of relaxation, intimacy, sharing and pleasure.

IIMAT s.p.a. has carefully checked and adjusted your Toto to ensure its efficiency and safety, as well as compliance with the strictest criteria of quality and aesthetic.

In case of queries or the discovery of any anomalies, you can contact our Customer Service Department by following the instructions referred to in Chapter 9 - Assistance.

Before activating Toto, please read the instructions for proper installation: complying with the instructions provided in this manual will ensure the reliability and safety of Toto. It will also help to avoid problems from developing or occurring. Keep all documentation for future use.

TABLE OF CONTENTS

1 - Contents, disposal and recycling	5
2 - Product description	6
3 - Warnings	8
4 - Getting started	9
5 - Start-up and operating	10
6 - Thermostat programming	12
7 - Cleaning and maintenance	13
8 - Troubleshooting	14
9 - Assistance	15
10 - Warranty	16
11 - Specifications	18

1 - CONTENTS, DISPOSAL AND RECYCLING

The contents include:

- Toto, with all its components (see Chapter 2 - Product description)

- Power cable for Toto

- Power cable for electrical appliance

- User's Manual

Instructions for the disposal of packaging:

- comply with local regulations for the disposal of packaging materials.

- Do not leave packaging material available to children or persons with reduced mental capacity (risk of suffocation or injury).

- The European Directive 2002-96-EC on waste electrical and electronic equipment (WEEE), requires that appliances are not disposed of along with the regular general waste. Old appliances must be collected separately in order to optimize the recycling of substances they contain and to reduce the impact on human health and the environment. The crossed-bin symbol is marked on all products as a reminder of the obligation to dispose of them correctly. For more information on proper disposal of household appliances, contact your local authority or retailer.

- All refrigerators contain a certain amount of refrigerant that must be properly disposed of: care should always be taken when handling refrigeration units. This should also be kept in mind when disposing of such items.

2 - PRODUCT DESCRIPTION

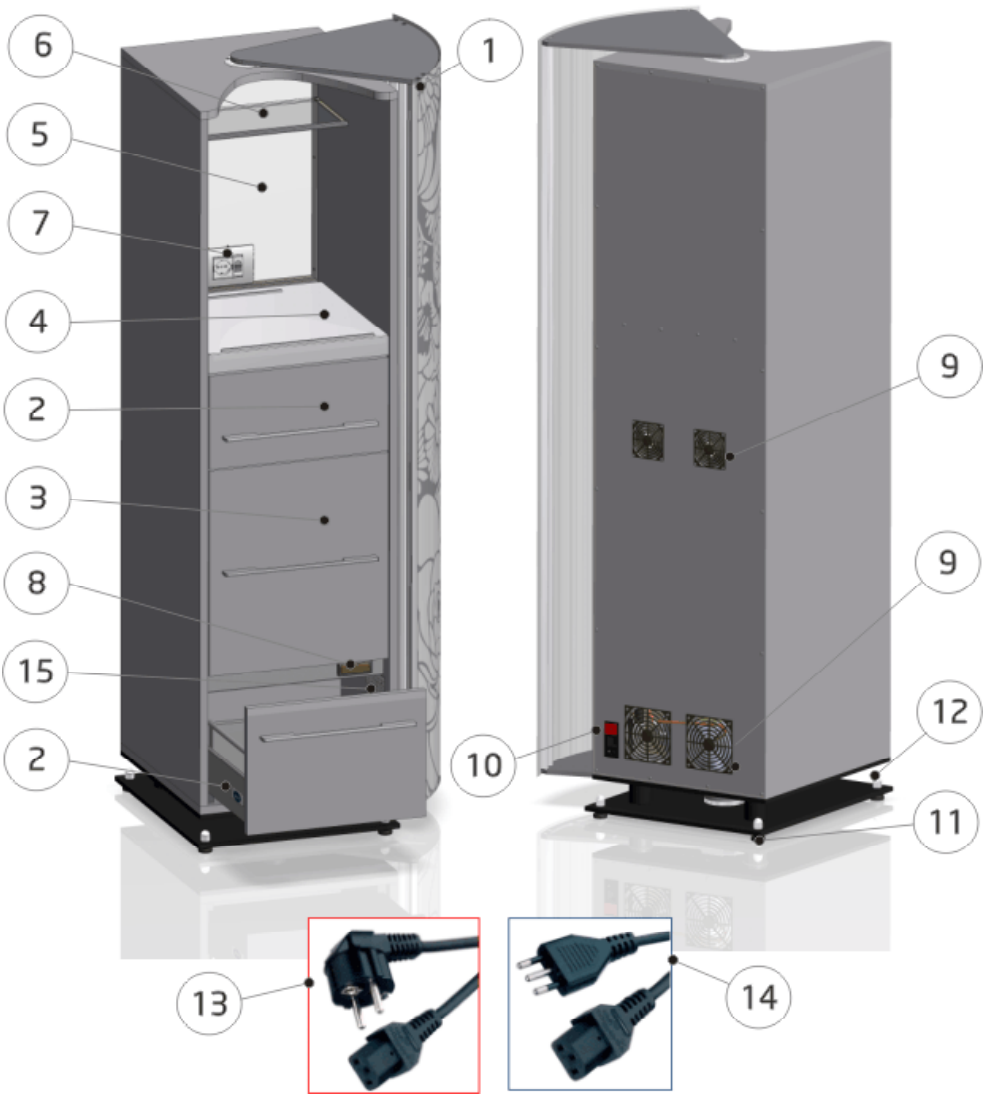

Pic.1 - Product components

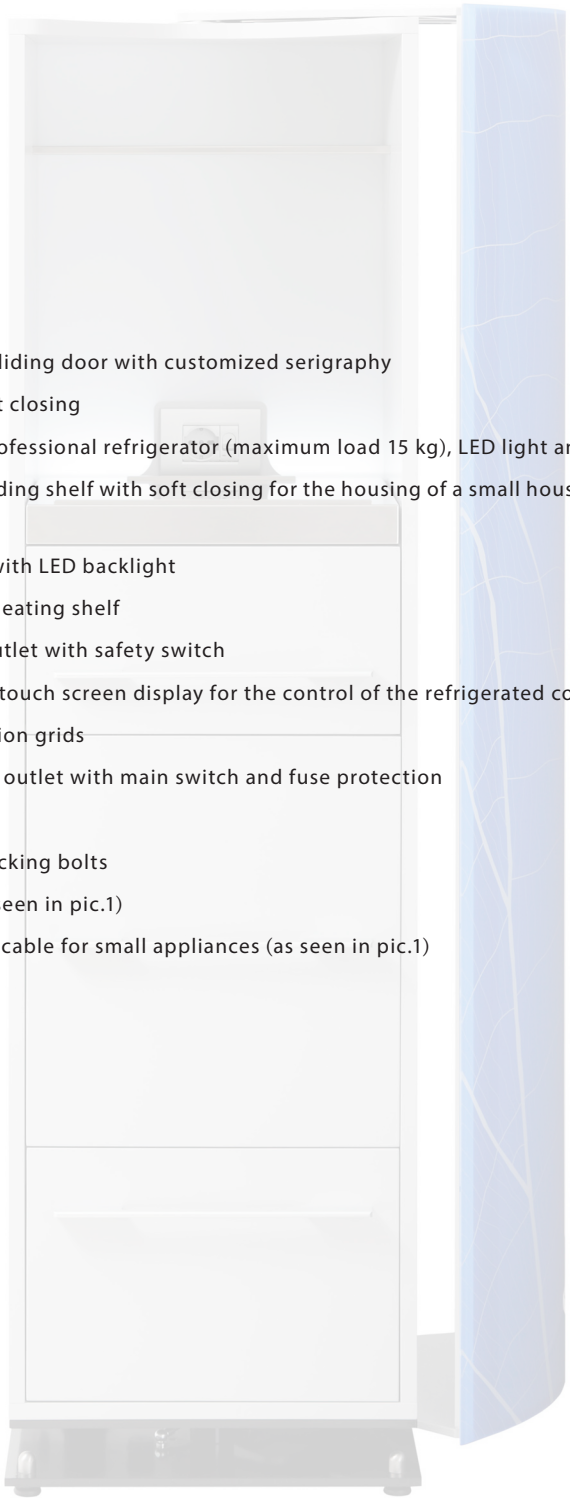

1. Tempered glass sliding door with customized serigraphy
2. Drawers with soft closing
3. Stainless steel professional refrigerator (maximum load 15 kg), LED light and ventilation
4. Stainless steel sliding shelf with soft closing for the housing of a small household appliance (not included)
5. Tempered glass with LED backlight
6. Tempered glass heating shelf
7. Internal power outlet with safety switch
8. Thermostat with touch screen display for the control of the refrigerated compartment
9. Fans and ventilation grids
10. Rear side power outlet with main switch and fuse protection
11. Leveling legs
12. Leveling legs-locking bolts
13. Power Cord (as seen in pic.1)
14. Auxiliary power cable for small appliances (as seen in pic.1)
15. Product label

3 - WARNINGS

- Toto is designed to be used in household and similar applications such as: shops, business premises, offices and other working environments, sports and leisure facilities, hotels, motels and other residential environment, bed & breakfast, catering services and similar (not for the retail), trade fairs, conferences and similar events.

- Toto is designed for internal use only: do not install it outdoors, even in sheltered areas.

- Toto must always stand in a vertical position, steadily on the floor: not for any reason (including transportation) can it be laid in a horizontal position.

- Do not remove the power cord from the outlet by tugging it: pull it out carefully by the plug.

- Do not touch internal components and circuits of Toto: in case of breakdown or malfunction, turn the main switch OFF (O), unplug the power cord from the wall-outlet and contact Customer Service.

- Before cleaning or maintenance, be sure to turn the main switch OFF (O) and to disconnect the plug from the wall-socket: just turning the main switch OFF (O) will not prevent risk of an electrical shock.

- Do not touch Toto with either wet/damp, bare hands or feet.

- Do not put objects on top of Toto.

- Make sure that the ventilation grids are free from obstruction.

- Do not use improperly parts of Toto (e.g. drawers, shelves, sliding door) as a support.

- Do not use Toto to store products which contain flammable propellants (e.g. spray cans) nor flammable substances.

- The refrigerated compartment should only be used as a temporary storage of food and/or beverages: it is not a freezer compartment.

- Do not use sharp tools inside the refrigerated compartment.

- Do not touch with bare hands the back wall of the refrigerated compartment: risk of injuries.

- Do not allow liquids or oily substances to spill into the drawer of the refrigerated compartment: use airtight containers to contain liquids.

- Promptly remove oils or substances that may soil the refrigerator door gasket: these substances can damage the sealing.

- Toto can be used by persons with reduced physical/mental/sensory ability only under supervision or after proper and detailed instruction by the figure in charge of their safety. Do not let children play with Toto.

- Substitution of power cord, lighting systems, ventilation, sliding drawers, sliding door as well as other repairs must be performed by authorized IMAT personnel only: installation, maintenance and replacement carried out by unauthorized personnel will void the warranty and expose the user to high risks. For more information see chapter 9 - Assistance.

- Use original spare parts only: this will guarantee Toto's compliance with the safety

requirements.

- IMAT reserves the right to modify the product without the need to implement these changes in previous versions. The information contained in this manual is believed adequate for the intended use of the system.

4 - GETTING STARTED

- Install Toto vertically on a completely flat and rigid surface, in a dry and well ventilated area, away from heat (e.g. stoves, heaters, fireplaces, etc..) and away from direct sunlight.

- Ensure a minimum distance of 10 cm between top/rear of Toto and any furniture or walls, with at least 25 cm between the opening side of the door and the closest obstacle, at least 5 cm between the other side of Toto and the closest obstacle, making sure to leave enough room for the sliding door to open.

- Loosen the locking bolts of the leveling legs above the support plate.

- With the door of Toto completely closed, adjust the leveling legs using a wrench until Toto is properly leveled. Toto can be tilted backward slightly in order to ease the adjustment of the leveling legs.

- Begin the leveling starting from the front, then the back, then from side to side: do not set the leveling legs in a way that the front side is lower that the rear side.

- Check that the movement of the sliding door occurs smoothly.

- Tighten the locking bolts of the leveling legs.

- Before connecting Toto, make sure that the product stood for at least three hours in its final position.

- Check that the wall socket conforms to the national standards, compatible with the plug of Toto and is able to withstand the maximum current consumption of the appliance, that is indicated on the product label.

- If the wall socket is not compatible with the Toto's plug, ask authorized personnel to replace it.

- The voltage of the power supply must be within the values indicated on the product label, which is located on the inner side of Toto, or below the thermostat inside the refrigerator.

- Make sure the rear side main power switch is turned OFF (O).

- Connect the power cord plug into the rear sides socket of Toto, then plug the power cord into the power socket on the wall.

Installation warnings and instructions for the correct use:

- in order to ensure smooth and proper operation, Toto must be leveled and installed on a flat rigid floor.

- Use standard tools to adjust Toto.

- Do not obstruct the ventilation grids: if obstructed, the compressor and the condenser of the refrigerator unit could give off extra-heat during normal operation resulting in high energy consumption and/or malfunctions.

- Do not use extension cords or multiple sockets: use a wall socket only.

- Do not place any objects on top of Toto.

- When Toto is installed, the power cord and power socket on the wall should be easily accessible.

- The power cord must not be squeezed or bent in a way that could compromise its integrity.

- The power cable must be checked regularly and replaced if necessary.

The company disclaims any responsibility for damages caused by inappropriate installation; follow the instructions as indicated.

5 - START-UP AND OPERATING

Before connecting Toto, make sure to follow the instructions in Chapter 4 - Getting started.

1. Turn the main power switch ON (I)::Toto is ready for use and the refrigerated compartment will begin to cool, wait at least two hours before placing food and/or beverages inside.

2. In order to open the door, gently pull it in the direction of the opening, without force, until the servo system support completes the opening.

3. In order to close the sliding door make sure that all the drawers and sliding shelf are closed: then gently push the door toward its closed position. Do not close the door by grabbing the nearest edge: fingers may be trapped between the door and the edge of Toto.

4. The back-lit glass is controlled by the opening of the door.

5. A small household appliance (e.g. coffee, tea infuser, ceramic hob, blender, juicer, etc.) can be placed on the stainless steel sliding shelf: be sure that the power specifications of the household appliance are compatible with Toto's power socket, indicated on the sticker (e.g. 230 V - 7.0 A).

6. Turn the power sockets safety switch ON (I).

7. When the safety switch is ON (I), heated glass shelf is operational: avoid prolonged contact with the heated glass shelf in order to avoid the risk of burn. The heated glass shelf can be effectively used to heat coffee cups made of porcelain, glass as well as pottery, glass or ceramic, aluminum trays; do not leave sensitive materials on the heated glass shelf (e.g. plastics, rubber, paper, etc..).

8. The opening and closing of Toto's sliding door have no effect on either Toto's power socket or on the heated glass shelf. Only the safety switch on Toto's power socket controls the aforementioned functions.

Recommendations for the use of the product:

- Install Toto in a cool, well ventilated place, protected from direct sunlight and away from heat sources.

- Keep the refrigerated compartment door open as little as possible: each opening causes a loss of energy.

- Do not overload the refrigerated compartment: to enable effective cool storage, cold air should be free to move. Otherwise the compressor will also be overloaded.

- Do not put hot/warm food or drink into the refrigerated compartment: this will result in a sudden increase in temperature, hence forcing the compressor to overwork, resulting in high energy consumption and the increased risk of compressor failure.

- In order for the refrigerated compartment to work properly, its door must be completely closed.

- Treat Toto carefully, avoid forcing the drawers movement or overloading the drawers.

- Ensure that the sliding door is not forced in its movement, nor hit with sharp or hard objects such as brooms, mops or other items that may cause damages or breakages. Gently maneuvering the door movement will avoid kickback or bounce that may harm the structure.

- Toto is designed and manufactured in compliance with international safety standards. These warnings are provided for safety reasons and must be read carefully. Do not access the internal circuits of Toto under any circumstances.

- Energy saving is not only cost savings, it shows respect for the environment.!

6 – THERMOSTAT PROGRAMMING

The refrigerated compartment is set by IMAT at a temperature of 5 ° C. To change this setting, adjust the thermostat (Pic.2) as follows:

A. Press "P" without holding it: on the display will flash "SP" (the first time it will be "5.0" - then the value set by the customer will appear).

B. Set the desired temperature by pressing "UP" and "DOWN" setting range:(from +4 to +12°C).

C. Complete the process by pressing the button "P" without holding it, or simply wait for the thermostat to automatically save the new setting (in this case, the display shows "SP" flashing 4 times).

If the compartment is not used for an extended period, it is suggested to set it in the Stand-by mode, pressing and holding "U" for more than 1 second: while in Stand-by mode, only the light shown in Pic.2 will be lit on the LED display. Caution: this step will stop the cooling circuit but will not cut power off from Toto!

Before leaving Toto unused for an extended period it's suggested to dry the inner liner of the refrigerated compartment in order to avoid the formation of mold or unpleasant odors.

To protect the compressor from damages caused by short-time on-off cycles, after each start a flashing "or" will appear on the display alternated by the value of the temperature in the refrigerated compartment: this is normal and indicates the delay of about 3 minutes that is necessary for Toto to equilibrate the pressure into the cooling circuit.

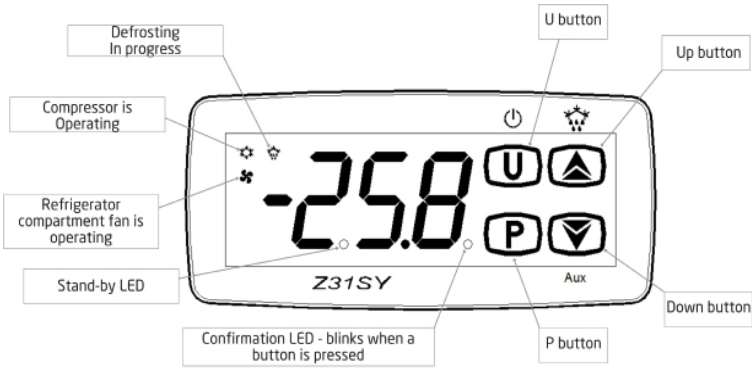

Pic.2 – Thermostat Display- buttons and operating indications

7 – CLEANING AND MAINTENANCE

- During cleaning and maintenance of Toto disconnect it from the power grid by turning the power switch to the OFF "O" position after which you should unplug the power cord from the wall socket.

- Do not for any reason use steam cleaners.

- Painted parts of the cabinet can be cleaned with a sponge or a soft cloth dampened with warm water and a small amount of mild soap. Do not use solvents, abrasives, bleach, ammonia or alcohol.

- In order to avoid the formation of halos, do not spray cleaners directly on the surface. This also applies to warm water with mild soap.

- While cleaning Toto take care that the water or other liquids are not poured into the ventilation grids, the sockets/plugs or the thermostat.

- Gently remove an accumulation of dust and dirt that may be accumulated in the ventilation grids with the help of a vacuum cleaner.

- Toto is manufactured with hygienic materials which are odor free. To maintain this feature it is necessary to store foods or drinks closed into airtight containers or bottles: this will keep the refrigerated compartment free from odors, mold and stains caused by leaks of liquids and foods.

- At the top of the refrigerated compartment an LED spotlight and a fan for air circulation are installed: take care while cleaning, that the fan does not come into contact with liquids, sprays, sponges, rags or any other item.

- To clean the gasket use a damp sponge with water only and then dry thoroughly.

- The inner liner of the refrigerated compartment can be cleaned with a damp sponge and, if necessary, a minimum amount of soap. Do not use solvents, abrasives, bleach, ammonia or alcohol.

- To clean the stainless steel parts of Toto, use products specifically designed for this purpose.

8 - TROUBLESHOOTING

Before contacting Customer Service check to see if the problem is easily resolvable by checking the list below.

Lights and thermostat do not turn on.

- Check that the wall socket is providing electricity (in order to exclude a power cut).

- Check that the plugs of the power cord are properly connected either to the wall socket or to Toto's rear-side socket.

- Make sure the main switch is turned ON (I).

The refrigerated compartment cools slightly.

- Make sure Toto is stood in its final position for at least 3 hours after installation.

- Verify that the refrigerated compartment door is completely closed and that the gasket is not damaged.

- The refrigerated compartment was left open for a long period of time and therefore requires a certain amount of time to restore the set temperature.

- The temperature of the environment around Toto is very high.

- The refrigerated compartment is overloaded by food and/or hot substances.

- Make sure that the refrigerated compartment load is not in contact with the back wall of the compartment.

- Check that the temperature setting on the thermostat is correct((follow the instructions in Chapter 6 - Thermostat programming).

- Make sure the rear ventilation grids are free from obstacles that may obstruct them.

Toto is very noisy.

- Toto is not installed in a vertical position or properly installed: make sure the installation instructions (Chapter 4 - Getting started) have been properly followed.

- Toto is installed between cabinets or other surfaces that may be resonant and then emit or amplify the noise: the choice of positioning is not optimized. Place Toto according to the suggestions in Chapter 4 - Getting started.

- The refrigerant makes a slight noise even when the compressor is not operating: this is not a defect but is a normal characteristic of cooling systems.

- There are squeaks coming from the refrigerated compartment during the defrosting operation: this is also not a defect but a characteristic of cooling systems.

9 – ASSISTANCE

In case of malfunctions or anomalies that cannot be solved by following the guidelines in Chapter 8 - Troubleshooting, please contact our Customer Service. It will be necessary to provide Customer Service with the following information, that you will find written on the product label (Pic.3) located inside Toto, below the thermostat:

A. Product name ("Model")

B. Code ("Code")

C. Serial number ("Serial Number")

D. Description of the fault or malfunction

- Do not rely on unauthorized personnel and always ask for the installation of original spare parts.

- For the request of new or customized tempered glass ask our Customer Service; Customer Service will put you through one of our representatives in order for you to define your requirements and for them to support you with advice and suggestions.

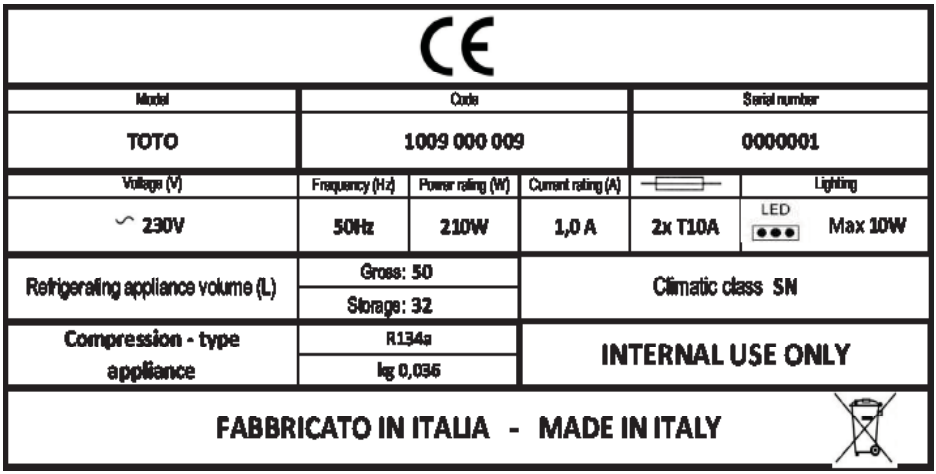

Pic.3 - Product label

Customer Service is available from Monday to Friday at 08.30-12.00 and 13.30-17.00 on the following phone number: +39 0434 567111

You can also contact Customer Service by e-mail at the following address:

assistenza.clienti@mytoto.it

10 – WARRANTY

This Warranty Certificate is a conventional warranty (hereinafter referred to as "Warranty"), brought by IMAT s.p.a. based in Fontanafredda (PN), Via P. Zorutti 13/14/16, with reference to its product (hereinafter referred to as "Product"), and without prejudice to the rights granted to the Customer by (Consumer Code) Legislative Decree 6 September 2005, no.206.

Conditions of Validity and Duration

IMAT s.p.a. (hereinafter "IMAT") warrants the Product against defects of Conformity, as defined by applicable law, occurring within the twenty-fourth month after the date of its delivery. The consumer is required to prove, by means of a delivery document or a document valid for tax purposes (for example your sales receipt) issued by an authorized dealer, the date in which the delivery was performed, the name of the dealer, Product data. For the purpose of this Warranty, therefore, it's necessary that the documentation referred to above, along with the Warranty card, is properly preserved and presented to the authorized Technical Service who is to provide the assistance.

The Warranty covers the replacement or repair of the Product parts, which show defects of Conformity detected and reported by the personnel of the authorized Technical Services, attributable to an act or omission of the manufacturer. It will provide the replacement of the Product, instead of a repair, only in the case that it is impossible or not economically convenient to substitute the damaged part. The replacement does not affect the terms and conditions of maturity acquired at the time of the original purchase.

The consumer loses his Warranty rights if he doesn't denounces the lack of conformity within two months after it was discovered. Only for Defects of Conformity that occur six months after the date of delivery the consumer must prove that they existed at that date. In the absence of evidence, IMAT will require a lump sum for relocation expenses.

Exclusions

This warranty doesn't cover all cases of careless use of the Product, misuse or negligence, failure to follow instructions and directives for the operation and installation of the Product described in the attached User's Manual (part of the this certificate), failure to repair in a timely way a defect of Conformity, non-domestic use, improper installation or maintenance, maintenance done by unauthorized personnel or performed with aftermarket parts, shipping damage. Similarly the Warranty is excluded for damage caused by weather and natural events as well as by deformity which cannot be assigned to actions or omissions by the manufacturer. Damages caused by usury or by the normal use of parts such as screens, gaskets, light bulbs, fans, guides, handles, knobs, loose parts, parts made of glass, enameled and/or painted parts, any accessories and consumables etc., as well as interventions and maintenance procedures as described in the User's Manual are not covered by the Warranty. IMAT disclaims any responsibility for any damage that may directly or indirectly be caused to persons, things and

animals as a result of failure to observe all the instructions contained in this User's Manual, and especially the warnings regarding installation, operation and maintenance of the Product. During the period covered by the Warranty, the Technical Assistance will be performed entirely free of charge by authorized personnel (ref. Customer Service). Should the Product be repaired at one of the Service Point indicated by IMAT, the risk of transport related problems will rest on the Customer shoulders in case of direct dispatching, while resting on IMAT's shoulders in case of withdrawal at the user premises.

This Guarantee is the only Warranty provided by IMAT. No Third party is allowed to modify the terms of the Warranty or issue any other verbal or written form of Warranty. The Warranty expires after the period of 24 (twenty four) months, after which any repair intervention is by the Customer.

11 - SPECIFICATIONS

Installation	Free standing See chapter 4 - Getting started for the right installation
Dimensions (mm)	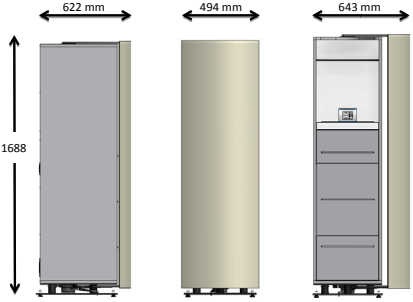
Door opening	Toward right side
Energy consumption	Refrigerator: 300 kWh/y Overall: 803 kWh/y (worst working conditions)
Power	LED: 9,4 W Heated glass shelf: 48 W
Net weight	151 kg
Packed weight	166 kg
Refrigarator thermostat	Electronic, programmed a +5°C 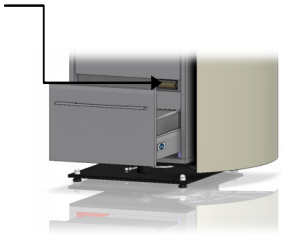
Defrosting	Automatic
Compliance with EU normatives	A. 73/23/CEE dated 19/02/73 (Low voltage) and following modifications B. EN 62471 (Photo-biologic safe) C. 89/336/CEE dated 03/05/89 (Electromagnetic compatibility) and following modifications D. 2002/96/CE (WEEE - Waste of Electric and Electronic Equipment) E. ISO 7170/2005 (strenghtness and durability of shelf appliances)

User's manual
TOTO
Document number: ENG-009495

imat

IMAT s.p.a. - Via Zorutti 13/14/16 - 33074 Fontanafredda (PN)
www.mytoto.it - assistenza.clienti@mytoto.it
GRUPPO MARCEGAGLIA